

## Instructions for Removing Locking Lid

If you do not wish to use the locking lid, you may remove it by following these simple steps:

- 1) Using the "L" shaped wrench (included with the hardware kit), remove each of the 2 long shoulder bolts that secure the hinge areas of the inner locking lid and outer cover lid to the mailbox body.
- 2) After removing the long shoulder bolts remove the inner locking lid from the mailbox.
- 3) Using the "L" shaped wrench, install the 2 short shoulder bolts (included) with the hardware kit) and nylon washers to attach the hinge areas of the outer lid to the mailbox



[www.foryourhomeandgarden.com](http://www.foryourhomeandgarden.com)